

*Dedicated to People Flow™*




MANAGING THE FLOW OF PEOPLE AND MATERIALS IN MEDICAL FACILITIES


# KONE Solutions for Medical Facilities

# A full range of solutions for demanding

A modern hospital or medical facility offers many challenges for managing the flow of people and materials. Patients in beds need to be transported quickly and smoothly with accompanying staff and medical equipment. Food, laundry, medical supplies and equipment must be transported without interruption. Elevators are used by both patients and visitors, many of whom may have special mobility requirements.

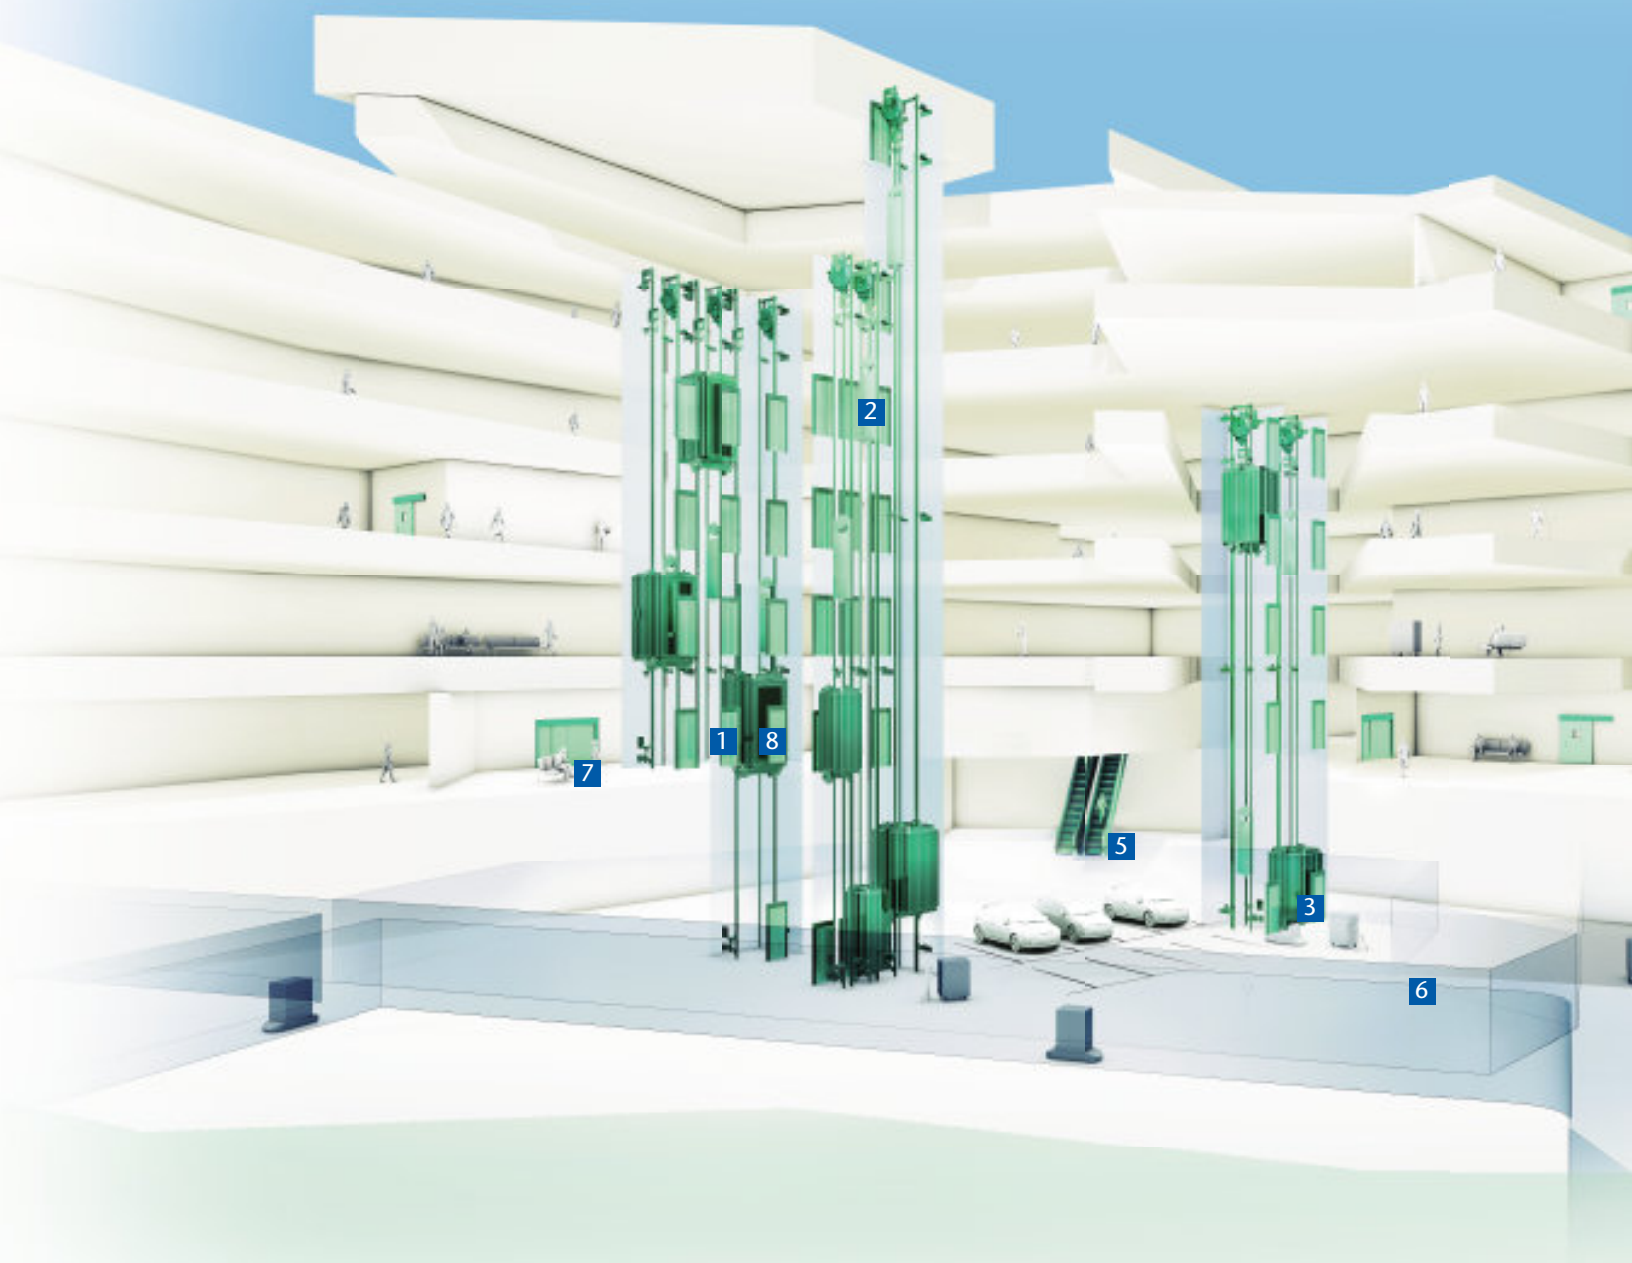

# medical facilities

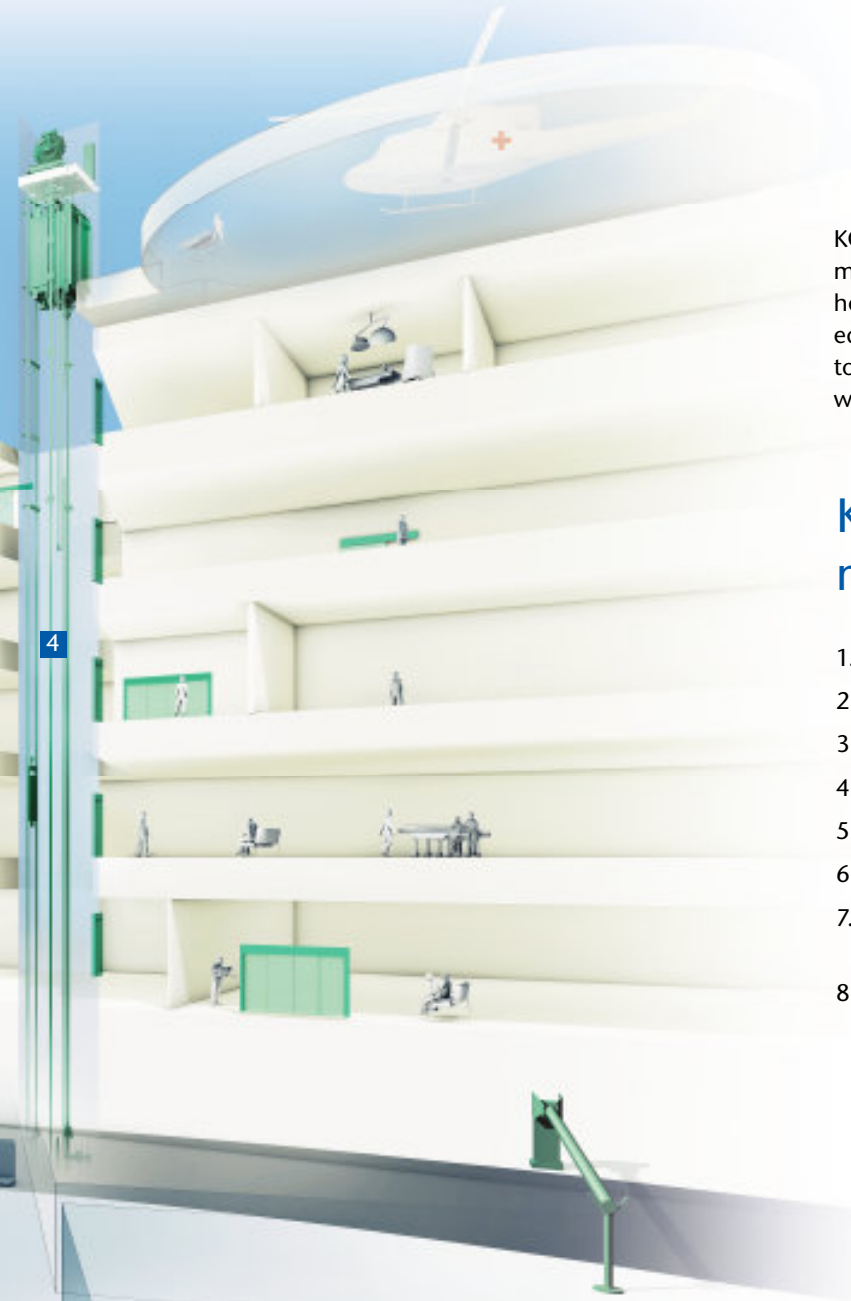

KONE has a long history of designing, implementing, maintaining and modernizing solutions in demanding hospital environments. By taking each phase of the equipment's lifetime into consideration, KONE works to keep the facility operating at maximum service, with a low total cost of ownership.

## KONE solutions for medical facilities

1. Visitor/Passenger elevators
2. Patient/Service elevators
3. Freight elevators
4. Trauma elevators
5. Escalators
6. Loading dock
7. Automated guided vehicles integrated with elevators and building management systems
8. Destination control systems for elevator groups

# A complete product portfolio – built for demanding medical applications

KONE delivers a full range of elevators and escalators to ensure that patients, staff, visitors and materials move smoothly, efficiently and reliably into, within and out of the hospital.

## Elevators

When designing KONE elevators for use in hospitals, we have paid particular attention to safety, reliability, smooth and quiet operation, eco-efficiency and hygiene.

All KONE elevator solutions are EcoDisc® powered and utilize proven KONE components.

### Energy-efficient and cost-effective

- Energy-efficient drives and hoisting systems with regenerative features
- Energy-saving LED and fluorescent lighting solutions
- Standby solutions to save energy when equipment is not in use

### Efficient management of people flow

- KONE Polaris™ destination control system to improve user guidance and boost traffic handling
- Centralized and exchange of data between KONE systems and other elevator and escalator monitoring, command and management with KONE E-Link™
- Easy exchange of data and integration of KONE solutions with other facility management systems through open standard interfaces

### Safe, smooth and reliable

- Accurate leveling to improve safety, comfort and ease of use; important for elderly and disabled people and when loading beds and carts
- Reliable permanent-magnet based gearless KONE EcoDisc hoisting machines with excellent track record; more than 300,000 units in operation globally
- Meets the strictest requirements for electromagnetic compatibility: EN-12016

### Space-efficient

- KONE Machine Room-Less elevators save space, allowing more room for patient care and giving architectural freedom for design
- Enables elevator to serve the top floor without a machine room on the roof

### Hygienic and visually pleasing

- Designs and colors comforting for patients and staff
- Durable and easy-to-clean materials


## Escalators

Escalators can ensure a smooth flow of people in large hospital building complexes and, for example, serve underground floors or car parks.

- Dedicated product range to match the expected traffic intensity
- Energy-saving features like efficient drives and LED lighting
- Lubrication-free chain that is oil- and odor-free and easier to clean and maintain
- Possibility to connect escalators to central monitoring systems so they can be controlled and managed remotely from a single location even over a large hospital complex

# Understanding the flow of people and materials in hospitals

In hospitals the elevators are in constant use from early morning to late evening every day of the week. Sudden increases in elevator service may be caused by lunch time or visitor hours. These and even the extreme conditions like possible evacuation of the whole building needs to be analyzed and simulated during the planning phase.

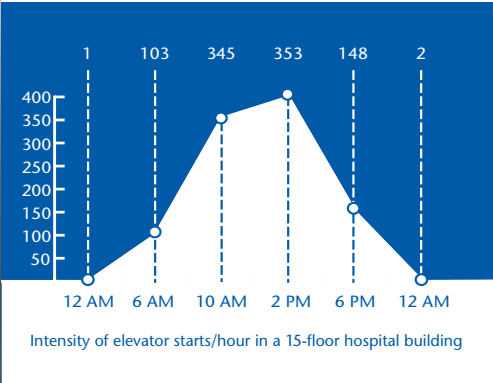

# Elevator solutions for all medical applica

Elevators are essential for ensuring the smooth flow of people and materials in the hospital. KONE provides a full range of elevator solutions, for supplies and equipment, staff, visitors and patients, whether they are coming in the front door or landing on the roof. When designing solutions for a medical environment, our design criteria is extreme reliability, safety and energy-efficiency, lower cost of ownership and minimum environmental impact. In hospital environments special attention is paid to hygiene. Materials have been carefully selected to be aesthetically pleasing and easy to clean.

## KONE patient/trauma elevators

are designed especially for hospital environments, offering the following special features:


- **Specialized car dimensions** – to accommodate the bed and medical equipment, with wide-opening doors and deep car size
- **Smooth loading and unloading** – precise leveling for easy entry of wheelchairs, beds and patients
- **Priority/emergency calls** – for immediate availability during emergency situations
- **Quiet, smooth operation** – to prevent disturbance to traveling patients and in rooms near the elevator shaft

## KONE patient/service elevators

are designed especially for hospital environments, offering the following special features:

- **Specialized car dimensions** – to accommodate the bed and medical equipment, with wide-opening doors and deep car size
- **Machine Room-Less** – enables the elevator to serve the top floor without a machine room on the roof of the hospital
- **Smooth loading and unloading** – precise leveling for easy entry of wheelchairs, beds and patients
- **Priority/emergency calls** – for immediate availability during emergency situations
- **Quiet, smooth operation** – to prevent disturbance to traveling patients and in rooms near the elevator shaft



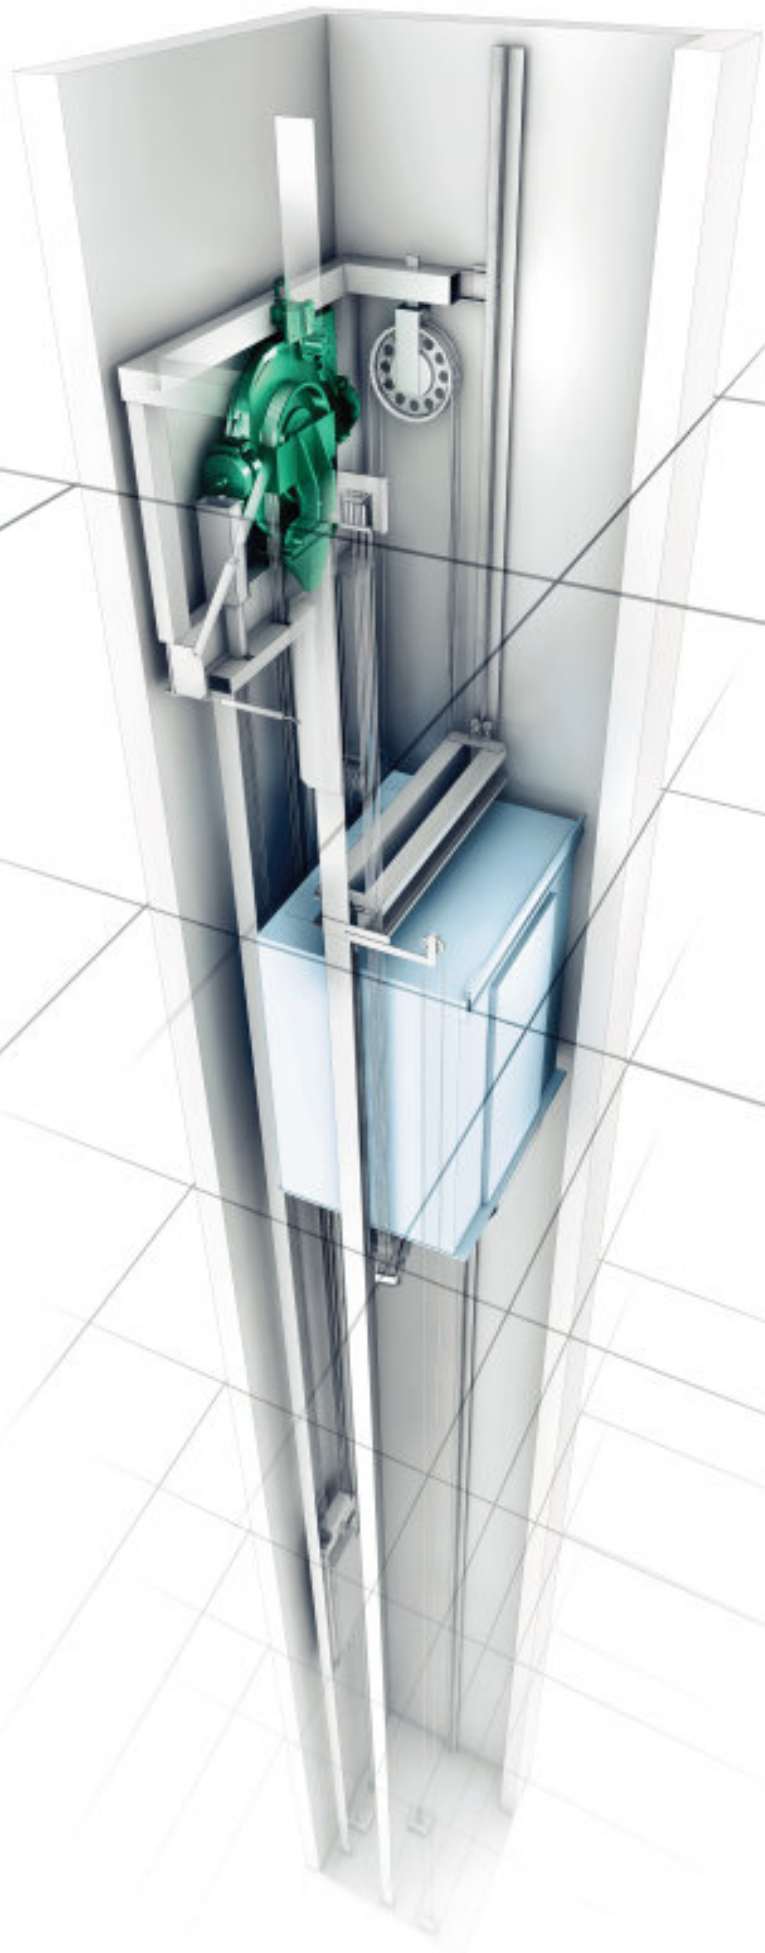

### KONE freight elevators

are specifically designed to move heavy loads, offering the following special features:

- **Fast and durable hoisting** – to cope with rough treatment
- **Machine Room-Less** – enables elevator to serve top floor without a machine room on the roof of the hospital
- **A smooth ride** – to handle fragile loads
- **Accurate leveling** – for easy loading and unloading
- **Full-width doors** – that maximize use of space in the car

### KONE visitor/passenger elevators

are designed to transport visitors and staff smoothly and efficiently, offering the following special features:

- **Space efficiency** – maximum car sizes with minimum shaft dimensions. Increases passengers' comfort while saving construction costs.
- **Machine Room-Less** – enables the elevator to serve the top floor without a machine room on the roof of the hospital
- **Design** – wide selection of design packages to match the building's architecture
- **Wide duty range** – for the people flow requirements of any hospital

# KONE Medical Facilities

## Trauma

### TYPE

Machine Room Above

### MAX TRAVEL

250 ft (76 m)

### MAX LANDINGS

30

### SPEED

200, 350, 500 fpm  
(1.00, 1.78, 2.54 m/s)

### CAR HEIGHT **F**

8, 9 or 10 ft  
(2438, 2743 or 3048 mm)

### ENTRANCE HEIGHT **G**

7, 8 or 9 ft  
(2134, 2438 or 2743 mm)

| Trauma                        |                          |                         | <b>A</b>                  | <b>B</b>                  | <b>C</b>                  | <b>D</b>                  | <b>E</b>              |
|-------------------------------|--------------------------|-------------------------|---------------------------|---------------------------|---------------------------|---------------------------|-----------------------|
|                               | CAPACITY<br>LBS.<br>(kg) | OPENING<br>TYPE<br>(mm) | HOISTWAY<br>WIDTH<br>(mm) | HOISTWAY<br>DEPTH<br>(mm) | INTERIOR<br>WIDTH<br>(mm) | INTERIOR<br>DEPTH<br>(mm) | DOOR<br>WIDTH<br>(mm) |
| Front<br>Opening              | 6000 (2724)              | 2SP-2SPCO               | 9'-1" (2769)              | 11'-5¼" (3486)            | 6'-0" (1829)              | 9'-8" (2946)              | 5'-0" (1524)          |
|                               | 8000 (3632)              | 2SP-2SPCO               | 10'-3" (3124)             | 11'-9¼" (3688)            | 7'-0" (2134)              | 10'-0" (3048)             | 6'-0" (1829)          |
|                               | 10,000 (4540)            | 2SP-2SPCO               | 11'-6" (3505)             | 13'-5½" (4102)            | 8'-0" (2438)              | 11'-0" (3353)             | 6'-0" (1829)          |
| Front &<br>Reverse<br>Opening | 6000 (2724)              | 2SP-2SPCO               | 9'-1" (2769)              | 12'-4¼" (3766)            | 6'-0" (1829)              | 9'-8" (2946)              | 5'-0" (1524)          |
|                               | 8000 (3632)              | 2SP-2SPCO               | 10'-3" (3124)             | 12'-8½" (3874)            | 7'-0" (2134)              | 10'-0" (3048)             | 6'-0" (1829)          |
|                               | 10,000 (4540)            | 2SP-2SPCO               | 11'-6" (3505)             | 13'-8½" (4178)            | 8'-0" (2738)              | 11'-0" (3353)             | 6'-0" (1829)          |



| Clear Overhead <b>I</b> Pit Depth <b>J</b> |                          |                    |                           |                    |                           |                    |                           |
|--|--------------------------|--------------------|---------------------------|--------------------|---------------------------|--------------------|---------------------------|
|  |                          | 200 FPM (1.00 m/s) |                           | 350 FPM (1.78 m/s) |                           | 500 FPM (2.54 m/s) |                           |
|  | CAPACITY<br>LBS.<br>(kg) | PIT DEPTH<br>(mm)  | CLEAR<br>OVERHEAD<br>(mm) | PIT DEPTH<br>(mm)  | CLEAR<br>OVERHEAD<br>(mm) | PIT DEPTH<br>(mm)  | CLEAR<br>OVERHEAD<br>(mm) |
|  | 6000 (2724)              | 5'-7" (1702)       | 15'-1" (4597)             | 5'-10" (1778)      | 15'-5" (4699)             | 6'-8" (2083)       | 16'-6" (5029)             |
|  | 8000 (3632)              | 6'-0" (1829)       | 16'-1" (4902)             | 6'-2" (1880)       | 16'-6" (5029)             | 6'-11" (2108)      | 17'-6" (5335)             |
|  | 10,000 (4540)            | 5'-10" (1778)      | 16'-4" (4978)             | 5'-11" (1803)      | 16'-9" (5105)             | -                  | -                         |

### Notes

1. All dimensions are based on an 8'-0" (2438 mm) cab with a 7'-0" (2134 mm) door. Alternate car and door heights are available, but will affect dimension **I**.
2. If occupied space exists below the hoistway, consult your KONE Sales Professional.
3. For seismic applications (zone 2 or greater) add 3" (76 mm) to hoistway width **A**.
4. Information is based upon structural machine room floor slabs. For machine beam applications, please consult your KONE Sales Professional.
5. Machine room height of 8'-0" (2438 mm) is required and is measured from the machine room floor surface to underside of the lowest obstruction above the machine **H**. Contact your local KONE Sales Professional for details.
6. The machine room is not centered on the hoistway, and requires an additional 7" (178 mm) in width. The additional 7" (178 mm) should be added to the counterweight side. Contact your local KONE Sales Professional for details.

Visit [www.us.kone.com](http://www.us.kone.com) for the latest job-specific details, CAD drawings, specifications, electrical data, reaction loads and building access requirements.

Contact your local KONE Sales Professional on how we may support your design process with BIM Models.

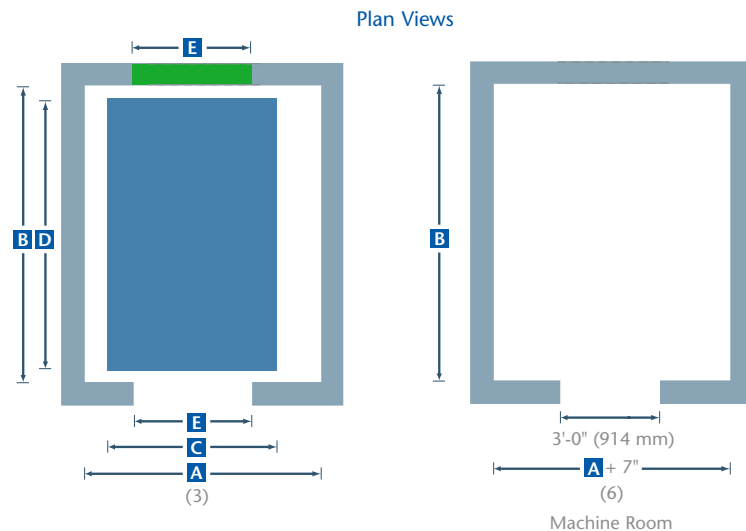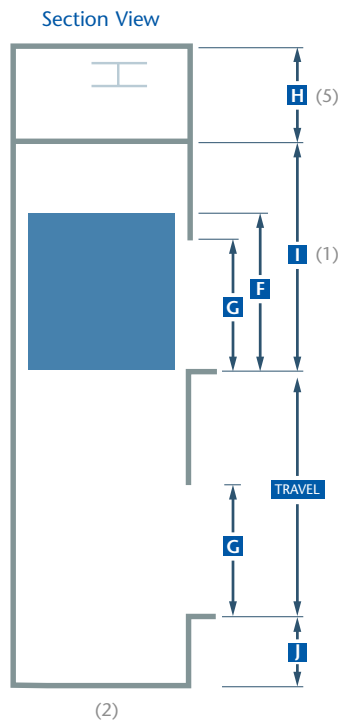

# KONE Medical Facilities

## Patient – Service

### TYPE

Machine Room-Less

### MAX TRAVEL

230 ft (70 m)

### MAX LANDINGS

36

### SPEED


200, 350, 500 fpm  
(1.00, 1.78, 2.54 m/s)

### CAR HEIGHT **F**

8, 9 or 10 ft  
(2438, 2743 or 3048 mm)

### ENTRANCE HEIGHT **G**

7, 8 or 9 ft  
(2134, 2438 or 2743 mm)

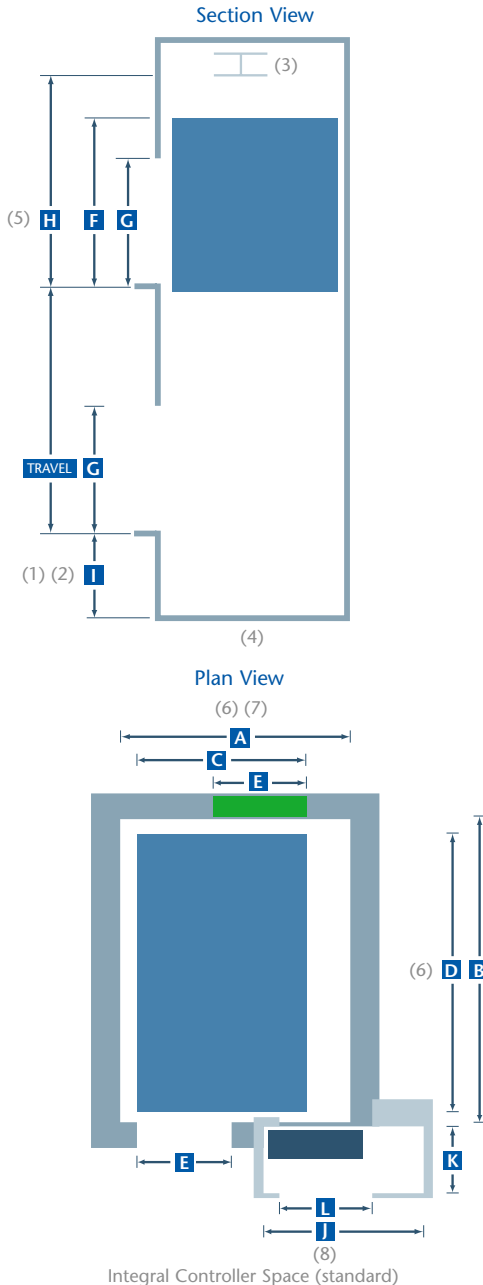

## Patient – Service

|                                    |                    |                   | <b>A</b>            | <b>B</b>            | <b>C</b>            | <b>D</b>            | <b>E</b>        |
|------------------------------------|--------------------|-------------------|---------------------|---------------------|---------------------|---------------------|-----------------|
|                                    | CAPACITY LBS. (kg) | OPENING TYPE (mm) | HOISTWAY WIDTH (mm) | HOISTWAY DEPTH (mm) | INTERIOR WIDTH (mm) | INTERIOR DEPTH (mm) | DOOR WIDTH (mm) |
| <b>Front Opening</b>               | 4000 (1814)        | 2SP               | 8'-5" (2565)        | 9'-5" (2870)        | 5'-8½" (1740)       | 7'-6" (2286)        | 4'-0" (1219)    |
|                                    | 4500 (2041)        | 2SP               | 8'-5" (2565)        | 9'-11" (3023)       | 5'-8½" (1740)       | 8'-0" (2438)        | 4'-0" (1219)    |
|                                    | 5000 (2268)        | 2SP               | 8'-5" (2565)        | 10'-2" (3099)       | 5'-8½" (1740)       | 8'-7¾" (2642)       | 4'-6" (1372)*   |
|                                    | 5000 AIA (2268)    | 2SP               | 8'-5" (2565)        | 10'-7¾" (3245)      | 5'-8½" (1740)       | 9'-0" (2743)        | 4'-6" (1372)*   |
| <b>Front &amp; Reverse Opening</b> | 4000 (1814)        | 2SP               | 8'-5" (2565)        | 10'-1" (3073)       | 5'-8½" (1740)       | 7'-6½" (2311)       | 4'-0" (1219)    |
|                                    | 4500 (2041)        | 2SP               | 8'-5" (2565)        | 10'-7" (3226)       | 5'-8½" (1740)       | 8'-0½" (2464)       | 4'-0" (1219)    |
|                                    | 5000 (2268)        | 2SP               | 8'-5" (2565)        | 11'-2¾" (3423)      | 5'-8½" (1740)       | 8'-8¼" (2667)       | 4'-6" (1372)*   |
|                                    | 5000 AIA (2268)    | 2SP               | 8'-5" (2565)        | 11'-6¾" (3524)      | 5'-8½" (1740)       | 9'-0" (2743)        | 4'-6" (1372)*   |

\*4'-0" (1219) door width also available

## Clear Overhead **H** Pit Depth **I**

|                          | 200 FPM (1.00 m/s) |                     | 350 FPM (1.78 m/s) |                     | 500 FPM (2.54 m/s) |                     |
|--------------------------|--------------------|---------------------|--------------------|---------------------|--------------------|---------------------|
| CAPACITY LBS. (kg)       | PIT DEPTH (mm)     | CLEAR OVERHEAD (mm) | PIT DEPTH (mm)     | CLEAR OVERHEAD (mm) | PIT DEPTH (mm)     | CLEAR OVERHEAD (mm) |
| 4000 (1814)              | 5'-8" (1728)       | 13'-7" (4141)       | 5'-8" (1728)       | 13'-11" (4242)      | 7'-3" (2210)       | 15'-0" (4572)       |
| 4500 (2041)              | 5'-8" (1728)       | 14'-0" (4268)       | 5'-11" (1804)      | 14'-3" (4344)       | -                  | -                   |
| 5000 and 5000 AIA (2268) | 5'-11" (1804)      | 14'-5" (4395)       | 5'-11" (1804)      | 14'-10" (4522)      | -                  | -                   |



|                      |                              | <b>J</b>                   | <b>K</b>     | <b>L</b>      |                 |
|----------------------|------------------------------|----------------------------|--------------|---------------|-----------------|
|                      | CAPACITY LBS. (kg)           | CONTROLLER SPACE           | WIDTH (mm)   | DEPTH (mm)    | DOOR WIDTH (mm) |
| <b>Control Space</b> | 4000 to 5000 AIA (1814-2268) | integral or remote cabinet | 4'-2" (1270) | 1'-8" (508)   | 3'-6" (1067)    |
|                      | 4000 to 5000 AIA (1814-2268) | adjacent or remote room    | 5'-0" (1524) | dimension (B) | 3'-0" (914)     |

## Notes

- Smaller Pit and Overhead dimensions may be available per specific applications. Contact your KONE Sales Professional for further information.
- Buffer service platforms are required when pit depth exceeds 8'-6" (2591 mm).
- A hoist beam(s) (by KONE) is (are) required for installation (by others). Dimension **H** reflects clear under hoist beam(s).
- If occupied space exists below the hoistway, consult your KONE Sales Professional.
- All dimensions are based on an 8'-0" (2438 mm) cab with a 7'-0" (2134 mm) door. Alternate car and door heights are available, but will affect dimension **H**.
- For front opening seismic applications (zone 2 or greater) add 4" (102 mm) to hoistway width and 3" (76 mm) to hoistway depth.
- For front and reverse opening seismic applications (zone 2 or greater) add 4" (102 mm) to hoistway width.
- If an EBD (Emergency Battery Device) is required, please contact your KONE Sales Professional for further detail regarding dimension **J**.
- Contact your local KONE Sales Professional regarding local code variations when utilizing the integral and remote closet options.

Visit [www.us.kone.com](http://www.us.kone.com) for the latest job-specific details, CAD drawings, specifications, electrical data, reaction loads and building access requirements.

Contact your local KONE Sales Professional on how we may support your design process with BIM Models.

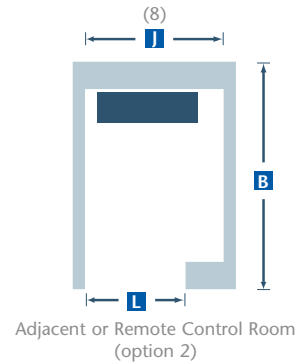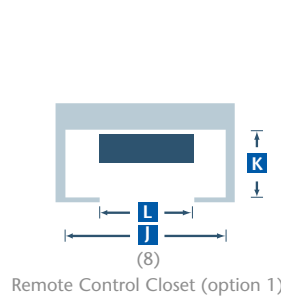

# KONE Medical Facilities

## Freight

### TYPE

Machine Room-Less

### MAX TRAVEL

75 ft (23 m)

### MAX LANDINGS

12

### SPEED

100, 150 fpm



(.50, .76 m/s)

### CAR HEIGHT **F**

8, 9 or 10 ft  
(2438, 2743 or 3048 mm)

### ENTRANCE HEIGHT **G**

8, 9 or 10 ft  
(2438, 2743 or 3048 mm)

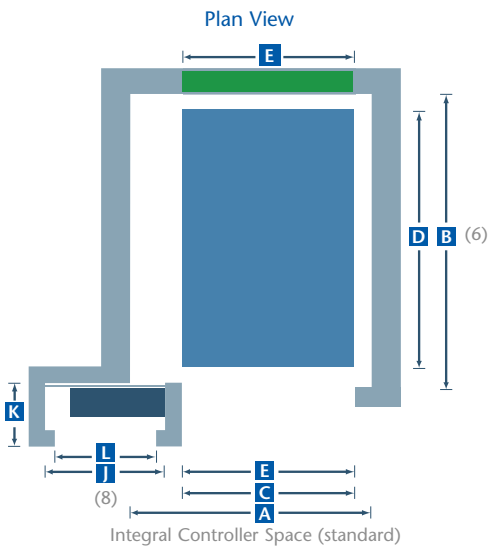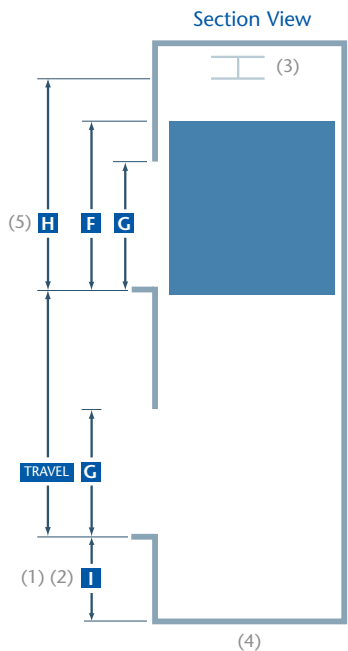

## Freight

|                         | CAPACITY LBS. (kg) | OPENING TYPE         | HOISTWAY WIDTH (mm) | HOISTWAY DEPTH (mm) | INTERIOR WIDTH (mm) | INTERIOR DEPTH (mm) | DOOR WIDTH (mm) |
|-------------------------|--------------------|----------------------|---------------------|---------------------|---------------------|---------------------|-----------------|
| Front Opening           | 6000 (2724)        | Vertical, Bi-Parting | 12'-0" (3658)       | 10'-10" (3302)      | 8'-0" (2438)        | 9'-5½" (2883)       | 8'-0" (2438)    |
|                         | 8000 (3632)        | Vertical, Bi-Parting | 12'-0" (3658)       | 10'-10" (3302)      | 8'-0" (2438)        | 9'-5½" (2883)       | 8'-0" (2438)    |
|                         | 10,000 (4540)      | Vertical, Bi-Parting | 12'-0" (3658)       | 12'-8" (3861)       | 8'-0" (2438)        | 11'-5½" (3492)      | 8'-0" (2438)    |
| Front & Reverse Opening | 6000 (2724)        | Vertical, Bi-Parting | 12'-0" (3658)       | 10'-10" (3302)      | 8'-0" (2438)        | 9'-5½" (2883)       | 8'-0" (2438)    |
|                         | 8000 (3632)        | Vertical, Bi-Parting | 12'-0" (3658)       | 10'-10" (3302)      | 8'-0" (2438)        | 9'-5½" (2883)       | 8'-0" (2438)    |
|                         | 10,000 (4540)      | Vertical, Bi-Parting | 12'-0" (3658)       | 12'-10" (3912)      | 8'-0" (2438)        | 11'-5½" (3492)      | 8'-0" (2438)    |

## Clear Overhead **H** Pit Depth **I**

|                    | 100 FPM (.51 m/s) |                     | 150 FPM (.76 m/s) |                     |
|--------------------|-------------------|---------------------|-------------------|---------------------|
| CAPACITY LBS. (kg) | PIT DEPTH (mm)    | CLEAR OVERHEAD (mm) | PIT DEPTH (mm)    | CLEAR OVERHEAD (mm) |
| 6000 (2724)        | 9'-8" (2946)      | 14'-2" (4318)       | 9'-8" (2946)      | 14'-2" (4318)       |
| 8000 (3632)        | 10'-2" (3099)     | 14'-2" (4318)       | 10'-2" (3099)     | 14'-2" (4318)       |
| 10,000 (4540)      | 10'-2" (3099)     | 14'-2" (4318)       | 10'-2" (3099)     | 14'-2" (4318)       |


|               |                         |                            | <b>J</b>     | <b>K</b>      | <b>L</b>        |
|---------------|-------------------------|----------------------------|--------------|---------------|-----------------|
|               | CAPACITY LBS (kg)       | CONTROLLER SPACE           | WIDTH (mm)   | DEPTH (mm)    | DOOR WIDTH (mm) |
| Control Space | 6000-10,000 (2724-4540) | integral or remote cabinet | 4'-2" (1270) | 1'-8" (508)   | 3'-6" (1067)    |
|               | 6000-10,000 (2724-4540) | adjacent or remote room    | 5'-0" (1524) | dimension (B) | 3'-0" (914)     |

## Notes


1. Shallower Pit Depths may be available per specific applications. Contact your KONE Sales Professional for further information.
2. Buffer service platforms are required when pit depth exceeds 8'-6" (2591 mm).
3. A hoist beam(s) (by KONE) is (are) required for installation (by others). Dimension **H** reflects clear under hoist beam(s).
4. If occupied space exists below the hoistway, consult your KONE Sales Professional.
5. All dimensions are based on an 8'-0" (2438 mm) cab with a 8'-0" (2438 mm) door. Alternate car and door heights are available, but will affect dimension **H**.
6. All dimensions are based upon regular type vertical bi-parting doors. When a floor height is less than the (door height x 1.5) + 6" (152 mm) then a pass type vertical bi-parting door is required. When pass type doors are required, add 1¼" (45 mm) to the hoistway depth for front opening and 3½" (89 mm) for front and reverse opening configurations.
7. All dimensions are based upon freight elevator loading classification A. Contact your KONE Sales Professional for further information regarding A17.1 or B44 freight elevator loading classifications (Classes A, B, C-1, C-2, C-3).
8. If an EBD (Emergency Battery Device) is required, please contact your KONE Sales Professional for further detail regarding dimension **J**.
9. Contact your local KONE Sales Professional regarding local code variations when utilizing the integral and remote closet options.

Visit [www.us.kone.com](http://www.us.kone.com) for the latest job-specific details, CAD drawings, specifications, electrical data, reaction loads and building access requirements.

Contact your local KONE Sales Professional on how we may support your design process with BIM Models.

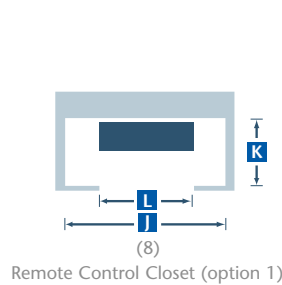

Remote Control Closet (option 1)

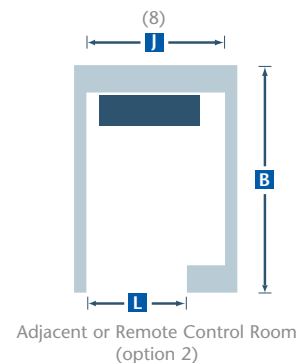

Adjacent or Remote Control Room (option 2)

# KONE Medical Facilities

## Visitor/Passenger

### TYPE

Machine Room-Less

### MAX TRAVEL

230 ft (70 m)

### MAX LANDINGS

36

### SPEED

200, 350, 500 fpm

(1.00, 1.78, 2.54 m/s)



### CAR HEIGHT **F**

8, 9 or 10 ft

(2438, 2743 or 3048 mm)

### ENTRANCE HEIGHT **G**

7, 8 or 9 ft

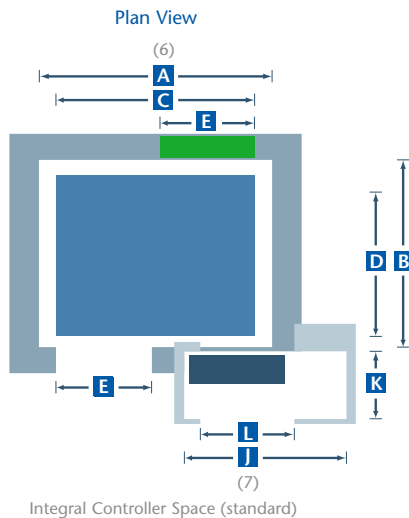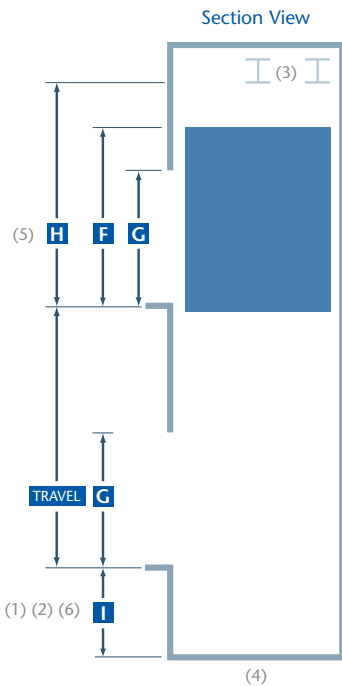

| Visitor/Passenger       |                    | A                 | B                   | C                   | D                   | E                   |                 |
|-------------------------|--------------------|-------------------|---------------------|---------------------|---------------------|---------------------|-----------------|
|                         | CAPACITY LBS. (kg) | OPENING TYPE (mm) | HOISTWAY WIDTH (mm) | HOISTWAY DEPTH (mm) | INTERIOR WIDTH (mm) | INTERIOR DEPTH (mm) | DOOR WIDTH (mm) |
| Front Opening           | 2000 (907)         | SSP               | 7'-4" (2235)        | 6'-8" (2032)        | 5'-8½" (1740)       | 4'-3¼" (1302)       | 3'-0" (914)     |
|                         | 2500 (1134)        | SSP-CO            | 8'-4" (2540)        | 6'-8" (2032)        | 6'-8½" (2045)       | 4'-3¼" (1302)       | 3'-6" (1067)    |
|                         | 3000 (1361)        | SSP-CO            | 8'-4" (2540)        | 7'-2" (2184)        | 6'-8½" (2045)       | 4'-9¼" (1454)       | 3'-6" (1067)    |
|                         | 3500 (1588)        | SSP-CO            | 8'-4" (2540)        | 7'-10" (2388)       | 6'-8½" (2045)       | 5'-5¼" (1657)       | 3'-6" (1067)    |
|                         | 4000 (1814)        | CO                | 9'-4" (2845)        | 7'-10" (2388)       | 7'-8½" (2350)       | 5'-5¼" (1657)       | 4'-0" (1219)    |
| Front & Reverse Opening | 2500 (1134)        | SSP-CO            | 9'-5" (2870)        | 7'-1" (2159)        | 6'-8½" (2045)       | 4'-3¾" (1314)       | 3'-6" (1067)    |
|                         | 3000 (1361)        | SSP-CO            | 9'-5" (2870)        | 7'-6" (2286)        | 6'-8½" (2045)       | 4'-9¾" (1467)       | 3'-6" (1067)    |
|                         | 3500 (1588)        | SSP-CO            | 9'-5" (2870)        | 7'-9½" (2375)       | 6'-8½" (2045)       | 5'-5¾" (1670)       | 3'-6" (1067)    |
|                         | 4000 (1814)        | CO                | 10'-5" (3175)       | 7'-9½" (2375)       | 7'-8½" (2350)       | 5'-5¾" (1670)       | 4'-0" (1219)    |

| Clear Overhead <b>H</b> Pit Depth <b>I</b> |                | 200 FPM (1.00 m/s)  |                | 350 FPM (1.78 m/s)  |                | 500 FPM (2.54 m/s)  |                     |
|--|----------------|---------------------|----------------|---------------------|----------------|---------------------|---------------------|
| CAPACITY LBS. (kg)                         | PIT DEPTH (mm) | CLEAR OVERHEAD (mm) | PIT DEPTH (mm) | CLEAR OVERHEAD (mm) | PIT DEPTH (mm) | CLEAR OVERHEAD (mm) | CLEAR OVERHEAD (mm) |
| 2000 (907)                                 | 5'-4" (1626)   | 14'-5" (4395)       | 5'-5" (1626)   | 15'-9" (4801)       | 7'-0" (2134)   | 16'-10" (5131)      |                     |
| 2500 (1134)                                | 5'-5" (1651)   | 13'-10" (4242)      | 5'-5" (1626)   | 15'-2" (4623)       | 7'-0" (2134)   | 16'-3" (4953)       |                     |
| 3000 (1361)                                | 5'-5" (1651)   | 14'-1" (4293)       | 5'-5" (1626)   | 15'-5" (4699)       | 7'-0" (2134)   | 16'-6" (5030)       |                     |
| 3500 (1588)                                | 5'-5" (1651)   | 14'-5" (4395)       | 5'-5" (1626)   | 15'-10" (4826)      | 7'-0" (2134)   | 16'-11" (5157)      |                     |
| 4000 (1814)                                | 5'-8" (1728)   | 14'-8" (4471)       | 5'-8" (1728)   | 16'-1" (4903)       | 7'-3" (2210)   | 16'-11" (5157)      |                     |



|               |                         | J                          | K            | L             |                 |
|---------------|-------------------------|----------------------------|--------------|---------------|-----------------|
|               | CAPACITY LBS. (kg)      | CONTROLLER SPACE           | WIDTH (mm)   | DEPTH (mm)    | DOOR WIDTH (mm) |
| Control Space | 2000 to 4000 (907-1814) | integral or remote cabinet | 4'-2" (1270) | 1'-8" (508)   | 3'-6" (1067)    |
|               | 2000 to 4000 (907-1814) | adjacent or remote room    | 5'-0" (1524) | dimension (B) | 3'-0" (914)     |

### Notes

- Smaller Pit and Overhead dimensions may be available per specific applications. Contact your KONE Sales Professional for further information.
- Buffer service platforms are required when pit depth exceeds 8'-6" (2591 mm).
- Hoist beams (by KONE) are required for installation (by others). Dimension **H** reflects clear under hoist beam.
- If occupied space exists below the hoistway, consult your KONE Sales Professional.
- All dimensions are based on an 8'-0" (2438 mm) cab with a 7'-0" (2134 mm) door. Alternate car and door heights are available, but will affect dimension **H**.
- For seismic applications (zone 2 or greater) add 4" (102 mm) to hoistway width. For front opening only configurations add 12" (305 mm) to overhead dimensions. If a speed of 500 fpm (2.5 m/s) is also required for a front opening add 12" (305 mm) to the pit depth.
- If an EBD (Emergency Battery Device) is required, please contact your KONE Sales Professional for further detail regarding dimension **J**.
- Contact your local KONE Sales Professional regarding local code variations when utilizing the integral and remote closet options.

Visit [www.us.kone.com](http://www.us.kone.com) for the latest job-specific details, CAD drawings, specifications, electrical data, reaction loads and building access requirements.

Contact your local KONE Sales Professional on how we may support your design process with BIM Models.

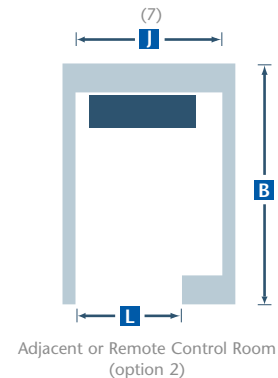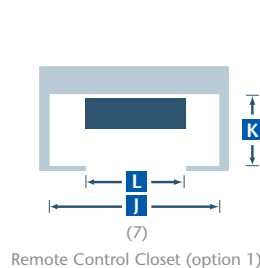

# KONE ECO3000®


KONE ECO3000 escalators are available in three step widths and glass or solid balustrades with many other available options and finishes. The robust design, coupled with excellence in manufacturing and service, keep KONE at the top of the list of preferred suppliers of escalators for airports and lightly used railway or metro stations, public access, office or retail applications.

## Notes

- (1) Details represent standard KONE escalator configurations. Please consult your Sales Professional to review all possible deviations.
- (2) Please visit [www.us.kone.com](http://www.us.kone.com) for the latest job-specific details, electrical data, reaction loads and building access requirements.

| KONE ECO3000 – Basic Data |   |
|---------------------------|---|
| Inclination               | 30  |
| Level Steps               | 2 or 3 Level Steps  |
| Radii                     | 3'-3 $\frac{3}{8}$ " or 4'-11" (1.0 or 1.5 m)<br>Upper Radius |
| Maximum Vertical Rise     | 49'-2 $\frac{9}{16}$ " (15m)                                  |
| Nominal Step Width        | 24", 32" and 40"<br>(600, 800, 1000 mm)                       |
| Balustrade                | Glass, Solid Vertical<br>or Solid Inclined                    |
| Balustrade Height         | 3'-3 $\frac{3}{8}$ " (1000 mm)                                |
| Speed                     | 100 fpm (0.5 m/s)   |
| Electrification           | ANSI  |
| Chain Type                | Inside Chain Roller   |
| Handrail                  | C or V-type   |
| Environment               | Indoor, Semi-outdoor or Outdoor                               |

Detail 1

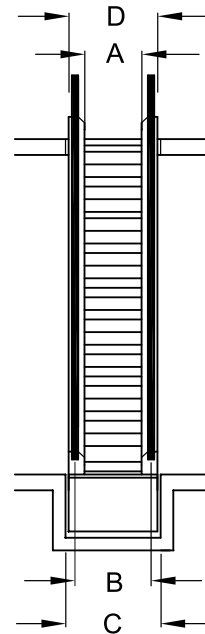


### Detail 1

|                                  |  |  |   |
|----------------------------------|--|--|---|
| NOMINAL STEP WIDTH (A)           | 24" (600 mm)                                   | 32" (800 mm)                                 | 40" (1000 mm)                                 |
| Center to Center of handrail (B) | 2'-10 <sup>5</sup> / <sub>8</sub> " (867 mm)   | 3'-5 <sup>5</sup> / <sub>8</sub> " (1064 mm) | 4'-1 <sup>1</sup> / <sub>16</sub> " (1262 mm) |
| Finished width of escalator (D)  | 3'-11 <sup>1</sup> / <sub>16</sub> " (1195 mm) | 4'-6 <sup>7</sup> / <sub>8</sub> " (1394 mm) | 5'-2 <sup>1</sup> / <sub>16</sub> " (1592 mm) |
| Width of pit (C)                 | 4'-1 <sup>1</sup> / <sub>16</sub> " (1246 mm)  | 4'-8 <sup>7</sup> / <sub>8</sub> " (1445 mm) | 5'-4 <sup>5</sup> / <sub>8</sub> " (1641 mm)  |

### Detail 2


| MAX. RISE | 2-LEVEL STEPS<br>3'-3 <sup>3</sup> / <sub>8</sub> " (1.0 m) upper radius |   | 2-LEVEL STEPS<br>4'-11" (1.5 m) upper radius                  |   | 3-LEVEL STEPS<br>4'-11" (1.5 m) upper radius                  |   |
|-----------|--|---|---|---|---|---|
|           | 24" (600) STEP 37'-6 <sup>1</sup> / <sub>16</sub> " (11.45 m)            | 24" (600) STEP 37'-6 <sup>1</sup> / <sub>16</sub> " (11.45 m) | 24" (600) STEP 37'-6 <sup>1</sup> / <sub>16</sub> " (11.45 m) | 24" (600) STEP 37'-6 <sup>1</sup> / <sub>16</sub> " (11.45 m) | 24" (600) STEP 37'-6 <sup>1</sup> / <sub>16</sub> " (11.45 m) | 24" (600) STEP 37'-6 <sup>1</sup> / <sub>16</sub> " (11.45 m) |
|           | 32" (800) STEP 28'-2 <sup>3</sup> / <sub>8</sub> " (8.6 m)               | 32" (800) STEP 28'-2 <sup>3</sup> / <sub>8</sub> " (8.6 m)    | 32" (800) STEP 47'-6" (14.47 m)                               | 32" (800) STEP 47'-6" (14.47 m)                               | 32" (800) STEP 47'-6" (14.47 m)                               | 32" (800) STEP 47'-6" (14.47 m)                               |
|           | 40" (1000) STEP 23' (7.01 m)   | 40" (1000) STEP 23' (7.01 m)                                  | 40" (1000) STEP 49'-2 <sup>9</sup> / <sub>16</sub> " (15 m)   | 40" (1000) STEP 49'-2 <sup>9</sup> / <sub>16</sub> " (15 m)   | 40" (1000) STEP 49'-2 <sup>9</sup> / <sub>16</sub> " (15 m)   | 40" (1000) STEP 49'-2 <sup>9</sup> / <sub>16</sub> " (15 m)   |
|           | NON-SEISMIC<br>(mm)  | SEISMIC<br>(mm)   | NON-SEISMIC<br>(mm)   | SEISMIC<br>(mm)   | NON-SEISMIC<br>(mm)   | SEISMIC<br>(mm)   |
| E         | 13'-9 <sup>1</sup> / <sub>16</sub> " (4193)                              | 13'-10 <sup>5</sup> / <sub>8</sub> " (4232)                   | 13'-9 <sup>1</sup> / <sub>16</sub> " (4193)                   | 13'-10 <sup>5</sup> / <sub>8</sub> " (4232)                   | 15'-1 <sup>3</sup> / <sub>16</sub> " (4593)                   | 15'-2 <sup>3</sup> / <sub>8</sub> " (4632)                    |
| F         | 8'-1 <sup>3</sup> / <sub>16</sub> " (2469)                               | 8'-2 <sup>3</sup> / <sub>4</sub> " (2508)                     | 8'-6 <sup>1</sup> / <sub>2</sub> " (2604)                     | 8'-8 <sup>1</sup> / <sub>16</sub> " (2643)                    | 9'-10 <sup>1</sup> / <sub>4</sub> " (3004)                    | 9'-11 <sup>13</sup> / <sub>16</sub> " (3043)                  |
| G         | 7'-2 <sup>3</sup> / <sub>8</sub> " (2194)                                | 7'-3 <sup>15</sup> / <sub>16</sub> " (2234)                   | 7'-2 <sup>3</sup> / <sub>8</sub> " (2194)                     | 7'-3 <sup>15</sup> / <sub>16</sub> " (2234)                   | 8'-6 <sup>1</sup> / <sub>8</sub> " (2594)                     | 8'-7 <sup>11</sup> / <sub>16</sub> " (2634)                   |
| L         | A+15'-3 <sup>9</sup> / <sub>16</sub> " (4663)                            | A+15'-6 <sup>11</sup> / <sub>16</sub> " (4742)                | A+15'-8 <sup>13</sup> / <sub>16</sub> " (4796)                | A+16' (4877)  | A+18'-4 <sup>3</sup> / <sub>8</sub> " (5598)                  | A+18'-7 <sup>1</sup> / <sub>2</sub> " (5677)                  |

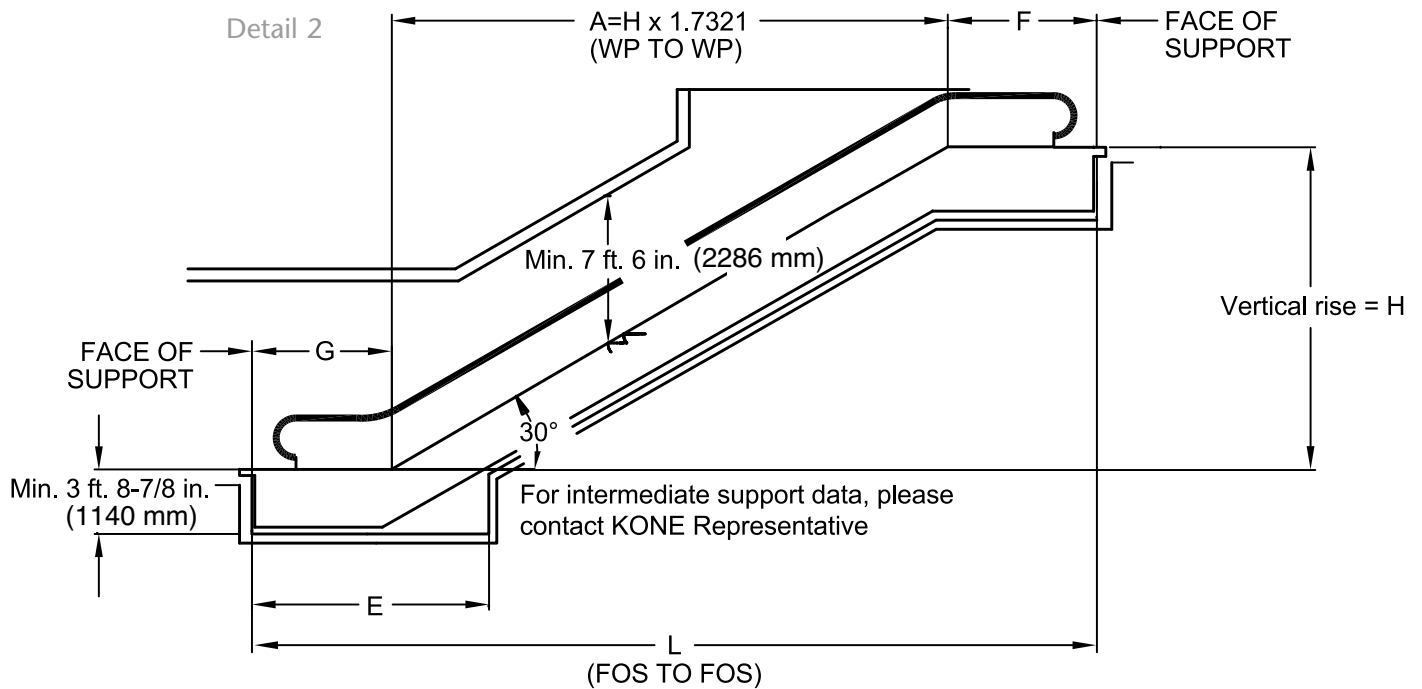


# Eco-efficient™ elevators for medical facilities


The cost of owning an elevator is made up of three components: the purchase price, the cost of maintenance and the running costs. Thanks to their dependability and energy-efficiency, KONE elevators significantly reduce the total cost of ownership.

KONE has constantly been the forerunner in developing the most energy-efficient elevator hoisting technology in the industry, as can be seen in the chart on the right. The annual energy consumption of a typical mid-size elevator has been reduced from over 20,000 kWh to one third. The latest KONE energy-saving options can squeeze this consumption even further, to close to 5,000 kWh/year.

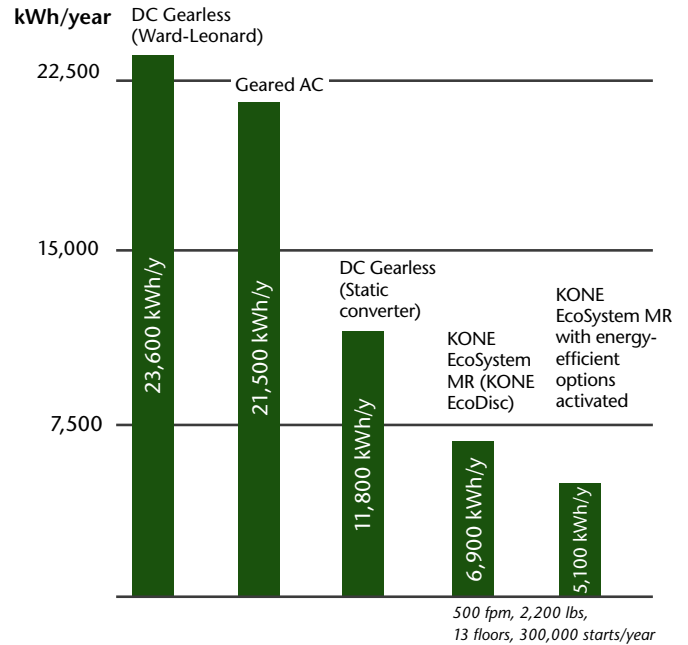

## The energy consumption of an Eco-efficient KONE elevator

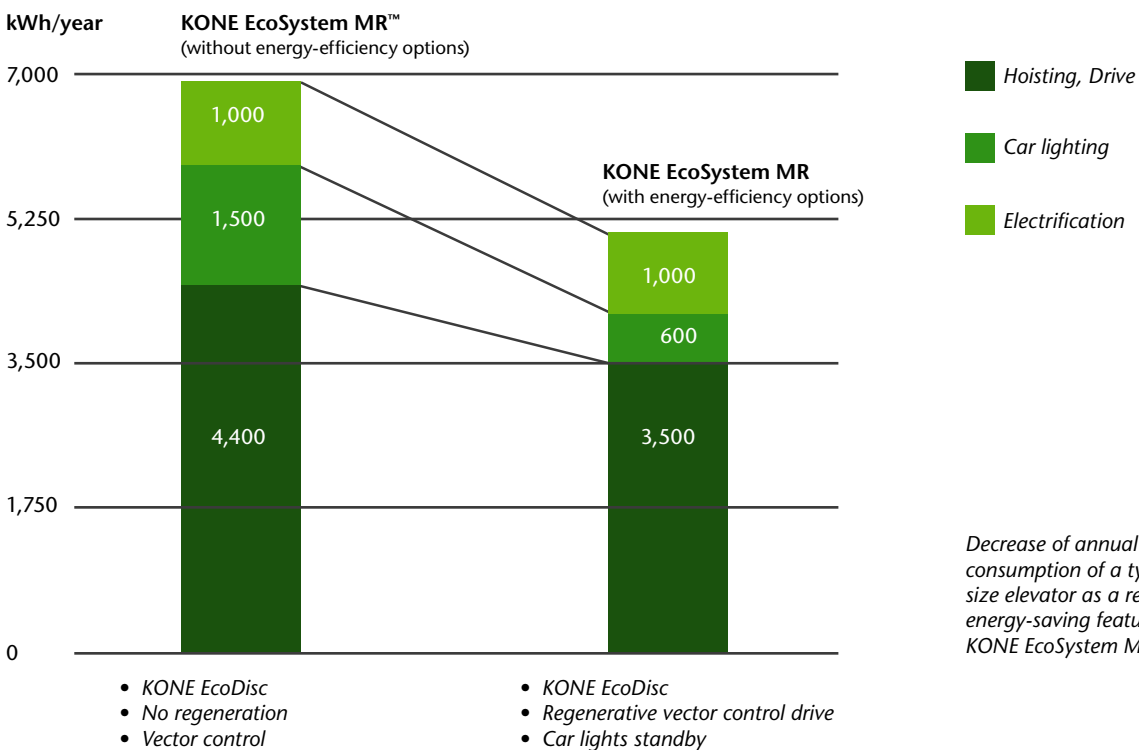

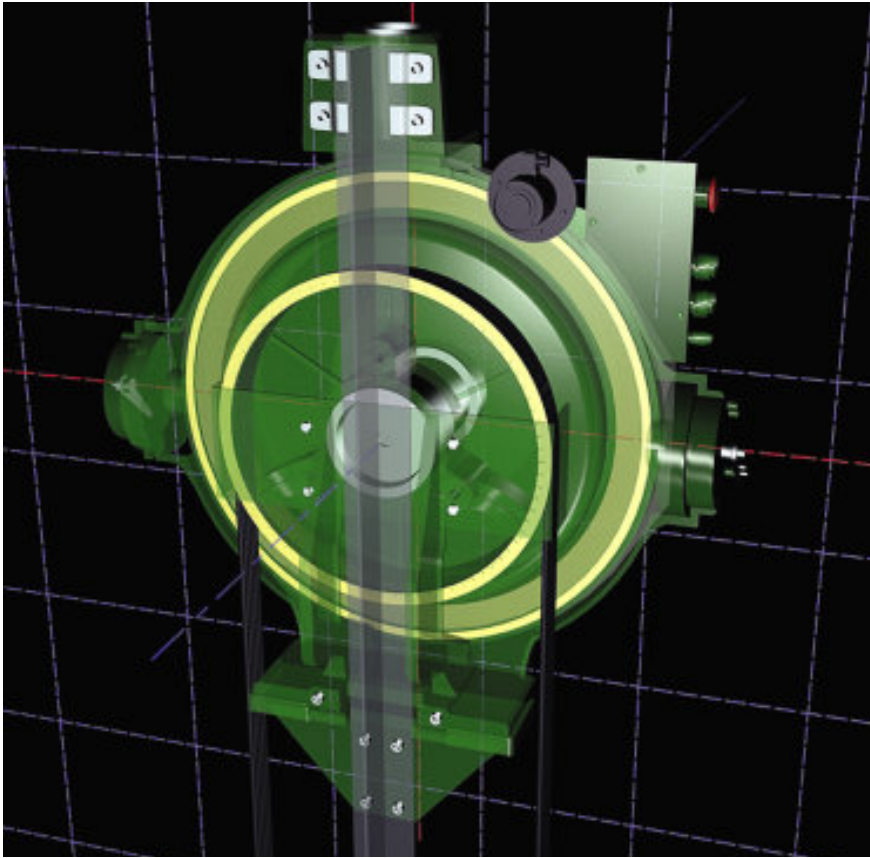

### Efficient hoisting and energy regeneration

The very high mechanical and electrical efficiency of the KONE EcoDisc saves a considerable amount of energy compared with other solutions: it consumes 50% less energy than a geared two-speed traction elevator and 70% less than a hydraulic elevator. It also recovers braking energy which can be converted into electricity for use elsewhere in the hospital. This regenerative feature alone can save 20-30% of the elevator's annual energy consumption.



### Energy-efficient lighting and standby solutions

A host of other options such as energy-efficient car lighting and solutions that switch car lights, fan and signalization to standby mode when the elevator is not in use, further reduce the energy consumption of the elevator. LED lights, for example, consume 80% less energy than halogen lights, and last ten times longer.

# Dedicated enhancements for medical

KONE offers a wide selection of options and accessories to help you monitor, manage and maximize the performance of your facility.



*The OPC interface can also be used to deliver information to in-car flat screens. This helps to deliver information to visitors and staff using the elevators.*

## Easy integration with other systems

KONE elevators and elevator management systems can be integrated with other building automation systems through Open Connectivity Standards (OPC). In a hospital this offers significant benefits, as the different logistical and information management tasks can be seamlessly integrated and optimized between different suppliers and brands without costly customized developments.



*Photo by Swisslog AG*

*AGVs are automatic guided vehicles that navigate unmanned throughout the building. When needed, the AGV calls the elevator via WLAN and OPC interface and changes it to "freight service mode." The elevator serves the current passengers and goes to the floor where the AGV is waiting. The AGV then enters and requests a floor. Upon arrival, the AGV drives out and the elevator returns to normal mode.*

## Integrating horizontal and vertical logistics

Thanks to the OPC standards used in KONE management systems, KONE has integrated elevators with AGV (Automated Guided Vehicles) systems in many hospitals. This offers many logistical advantages, since AGVs are not limited to horizontal movement only but can also travel from floor to floor.


The AGV units automatically navigate in the hospital, delivering food, laundry and medical supplies based on commands from the logistics system and a building map in the AGV's memory. AGVs do not collide into each other or with people as they can "see." AGV units can also "speak" and ask people to please step out of the way.

# segment

## KONE E-Link elevator monitoring and management system

KONE E-Link provides an accurate view of the transportation status, demand, performance and availability of elevators and escalators in the building. This helps you ensure that the equipment delivers the best possible performance at all times. KONE E-Link has an open interface to allow integration with other facility management systems.


- Real-time view of equipment status locally and remotely. Large building complexes or geographically remote buildings can be monitored and managed from a single location.
- Traffic history playback for event history, security and possible legal purposes
- Faster reaction to malfunctions, possible misuse and troubleshooting
- Faster rescue of entrapped passengers
- Local and remote control of equipment, scheduled commands like lockings and change of operation mode
- Easy integration with other facility management systems in the building

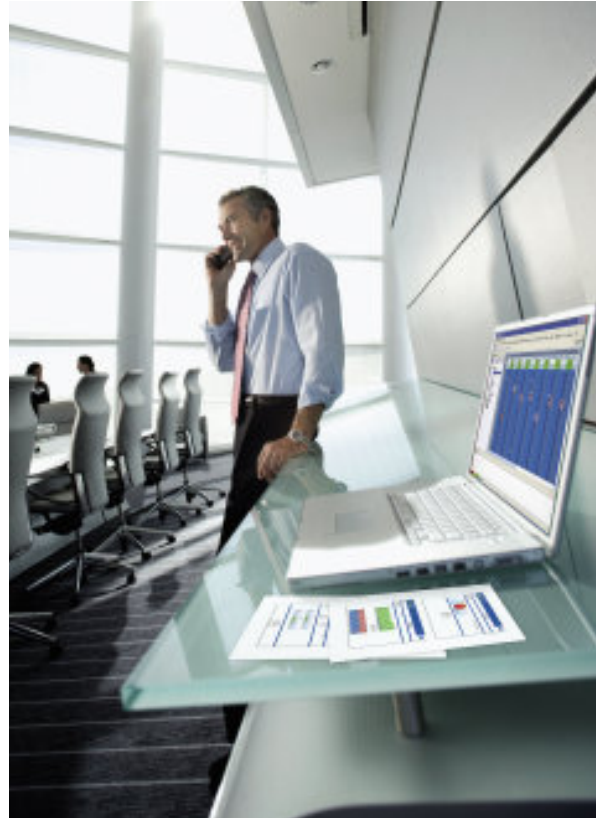

## KONE Polaris Destination Control

The KONE Polaris Destination Control system offers two benefits for medical facilities: better traffic handling and improved passenger guidance.

- Users in the lobby select their destination floor before entering the elevator; when the elevator arrives, the destination floor is already registered
- The Destination Operating Panel can work as an interactive directory showing the different wards and departments
- Conventional landing call stations and indicators can be used on other landings

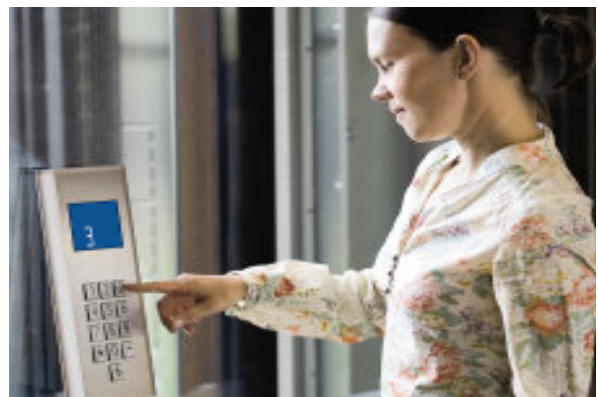

*The Destination Operating Panel can work as a directory showing the different wards. When the user enters the lobby, he or she selects the destination on the Destination Operating Panel. The DOP indicates which elevator will be available. When the elevator arrives, it automatically takes the visitor to the desired floor.*

# Lower cost of ownership for the lifetime

Major Projects is KONE's global team of experts, with dedicated solutions available to help customers through every stage of the building process. KONE experts have extensive experience with complex hospital projects, from early design stages throughout the building life cycle. When designing the building, thorough people flow analysis ensures that you have the right equipment for your requirements. Comprehensive project management services support the construction phase of the project. Preventive maintenance saves costs throughout the lifetime of the equipment, and flexible modernization solutions enable you to upgrade elevators and escalators as needed.

## Design

We supply more than elevators and escalators. We provide a complete People Flow™ solution, designed to serve you for the lifetime of the building. So our work begins a long time before the elevator shafts go up on the construction site. We can provide thorough analysis and simulations of the flow of patients, staff, visitors and supplies in the hospital, in order to match the capabilities of the equipment with your requirements.

Visual design of elevators in hospitals is important, not only from an aesthetic point of view, but also from functional, durability and hygienics point of view. KONE works with your design team to ensure that the people flow solution meets the requirements of the medical facility and is integrated with the architect's vision. You can choose from our wide range of interior options or you can create a fully custom-designed solution.



## Modernize

Modernizing your elevators, escalators and doors is an investment that can pay for itself. For patients and visitors, KONE modernization solutions increase safety, convenience and accessibility. For facility managers, they minimize disruption and maximize availability. And for hospital administration, they improve energy efficiency, reduce operating costs, and make elevator life-cycle management and budgeting more predictable.

With KONE Care for Life™ services, we help you determine when and how to modernize, with a thorough assessment of the safety, accessibility, reliability, eco-efficiency and appearance of your elevators. Depending on the results of this analysis, KONE can recommend a solution ranging from small repairs to modular modernization to full replacement.



# of the facility



Build



## Build

KONE has been involved in many major hospital projects. Our experienced project management teams guarantee smooth coordination with all parties involved in the project. KONE can also provide solutions that speed up the construction process. KONE's construction time elevators enable fast and efficient vertical transportation of people and materials during the construction phase.

Once the equipment has been installed, our experts examine and evaluate its performance, ensuring that all requirements have been met.



Operate and Maintain



## Operate and Maintain

Elevators, escalators and doors in medical facilities must function without interruption around the clock. Our trained maintenance technicians serve all types of equipment, both from KONE and from other manufacturers.

KONE maintenance is based on preventive care, to solve problems before they can lead to downtime. With the KONE Remote Monitoring Service™, we can keep an eye on the condition of your equipment from our KONE Customer Care Centers™. If the operation of the equipment deviates from normal, we dispatch a service team, with spare parts and knowledge of the problem. Often we can solve the problem before passengers have even noticed there was one.

KONE offers three maintenance solutions, KONE Care™ Standard, Plus and Premium, tailored to the different levels of requirements. You can further enhance the solution with additional services from the service portfolio.

**U.S. Operations Center**

One KONE Court  
Moline, Illinois 61265  
1-800-956-KONE (5663)

**Canadian Operations Centre**

6696 Financial Drive, Unit 2  
Mississauga, Ontario L5N 7J6  
1-905-858-8383

**KONE Mexico, S.A. de C.V.**

Clavel 227  
Colonia Atlampa  
Mexico City, D.F. 06450  
+52.55.1946.0100

For the latest product information  
and interactive design tools, visit  
[www.us.kone.com](http://www.us.kone.com)

KONE Inc. reserves the right to alter  
design and specifications without  
prior notice.

KONE, ECO3000 and EcoDisc are  
registered trademarks of KONE Inc.

Care, Care for Life, Customer Care  
Center, Dedicated to People Flow,  
E-Link, Eco-efficient, EcoSystem MR,  
People Flow, Polaris and Remote  
Monitoring Service are trademarks of  
KONE Inc.

"USGBC" and related logo is a  
trademark owned by the U.S. Green  
Building Council and is used by  
permission.

**U.S. Offices****Alabama**

Birmingham 205-944-1032  
Mobile 251-661-7522

**Arizona**

Phoenix 602-269-7877  
Tucson 520-624-3125

**Arkansas**

Little Rock 501-758-1889

**California**

Los Angeles 562-921-1555  
Sacramento 916-372-1458  
San Diego 858-679-2400  
San Francisco 510-351-5141  
Santa Barbara 805-349-1013

**Colorado**

Denver 303-792-3423

**Connecticut**

Hartford 860-257-9277

**Delaware**

856-251-1555

**District of Columbia**

Washington, DC 301-459-8660

**Florida**

Jacksonville 904-292-0225  
Miami 954-437-4300  
Naples 239-598-9310  
Orlando 407-812-8033  
Tampa 813-635-0330

**Georgia**

Atlanta 770-427-3373

**Hawaii**

Honolulu 808-836-2231

**Idaho**

801-977-1144

**Illinois**

Chicago 630-629-3100  
Peoria 309-697-9011  
Quad Cities 309-797-3232  
Rockford 815-874-1502

**Indiana**

Fort Wayne 260-484-9586  
Indianapolis 317-788-0061

**Iowa**

Des Moines 515-243-0109  
Quad Cities 309-797-3232

**Kansas**

Wichita 316-942-1201

**Kentucky**

Louisville 502-491-0565

**Louisiana**

Baton Rouge 225-291-5270  
New Orleans 504-736-0776

**Maine**

781-828-6355

**Maryland**

Baltimore 410-766-2100

**Massachusetts**

Boston 781-828-6355

**Michigan**

Detroit 734-513-6944  
Grand Rapids 616-534-3300

**Minnesota**

Minneapolis 651-452-8062

**Mississippi**

Jackson 601-939-7597

**Missouri**

Kansas City 816-531-2140  
St. Louis 314-521-8800  
Springfield 417-862-1174

**Montana**

Helena 406-449-1399

**Nebraska**

Omaha 402-592-7381

**Nevada**

Las Vegas 702-269-0919

**New Hampshire**

781-828-6355

**New Jersey**

High Bridge 908-638-6881

**New Mexico**

Albuquerque 505-888-0626

**New York**

Albany 518-464-0002  
New York City 718-361-7200

**North Carolina**

Charlotte 704-597-0430

**North Dakota**

651-452-8062

**Ohio**

Cincinnati 513-755-6195  
Cleveland 440-546-1100  
Columbus 614-866-1751

**Oklahoma**

Oklahoma City 405-682-5651  
Tulsa 918-258-0582

**Oregon**

Portland 503-652-1011

**Pennsylvania**

Harrisburg 717-653-7177  
Philadelphia 856-488-8830  
Pittsburgh 412-279-1561

**Rhode Island**

781-828-6355

**South Carolina**

704-597-0430

**South Dakota**

Sioux Falls 605-336-1578

**Tennessee**

Knoxville 865-938-3444  
Memphis 901-758-8320  
Nashville 615-360-7013

**Texas**

Austin 512-443-0967  
Dallas 469-549-0581  
Houston 281-442-6619  
San Antonio 210-491-0485

**Utah**

Salt Lake City 801-977-1144

**Vermont**

781-828-6355

**Virginia**

Richmond 804-328-1032

**Washington**

Seattle 425-861-9696

**West Virginia**

Charleston 614-866-1751  
Morgantown 412-279-1561

**Wisconsin**

Milwaukee 262-373-0460

**Wyoming**

303-792-3423

**Canada Offices****Alberta**

Calgary 403-275-5650  
Edmonton 780-452-9227

**British Columbia**

Vancouver 604-777-5663  
Victoria 250-384-0613  
Kelowna 250-491-1838

**Manitoba**

Winnipeg 204-895-2942

**Nova Scotia**

Halifax 902-450-1102

**Ontario**

Hamilton 905-648-3188  
Kingston 613-531-6262  
Ottawa 613-225-8222  
Toronto 905-948-2230

**Quebec**

Montreal 514-284-5663  
Quebec City 418-877-1494  
Sherbrooke 819-821-2182

